TROCELLEN HEATPRO INSTALLATION PROCESS

PE foam

Aluminium foil

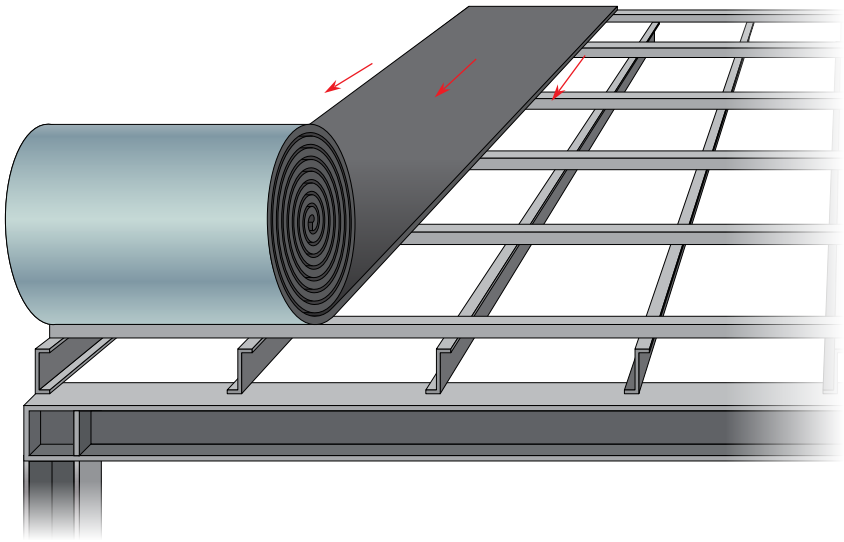

1 Unroll the **Trocellen HeatPro** up to full length of the roof with the aluminium foil side facing down

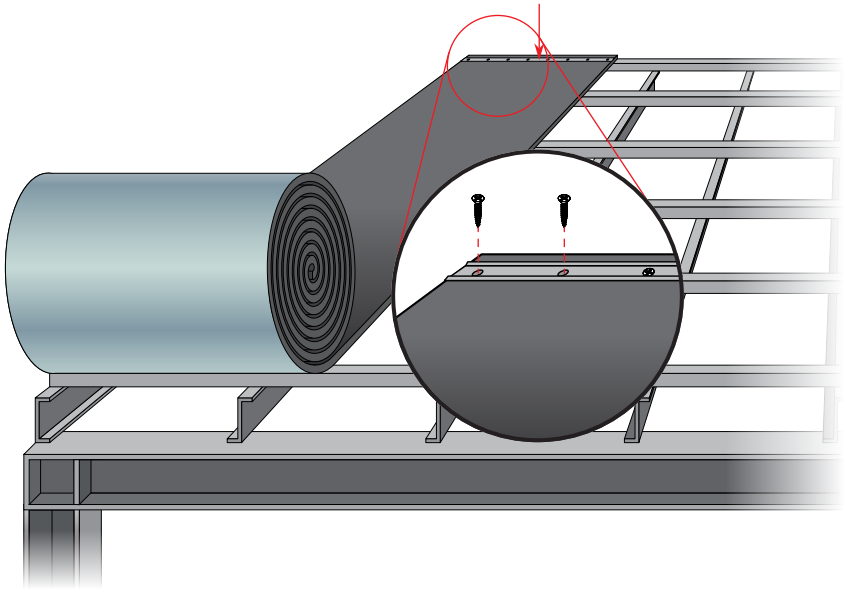

2 Secure the foam by screwing down on the ridgebeam end with a termination bar

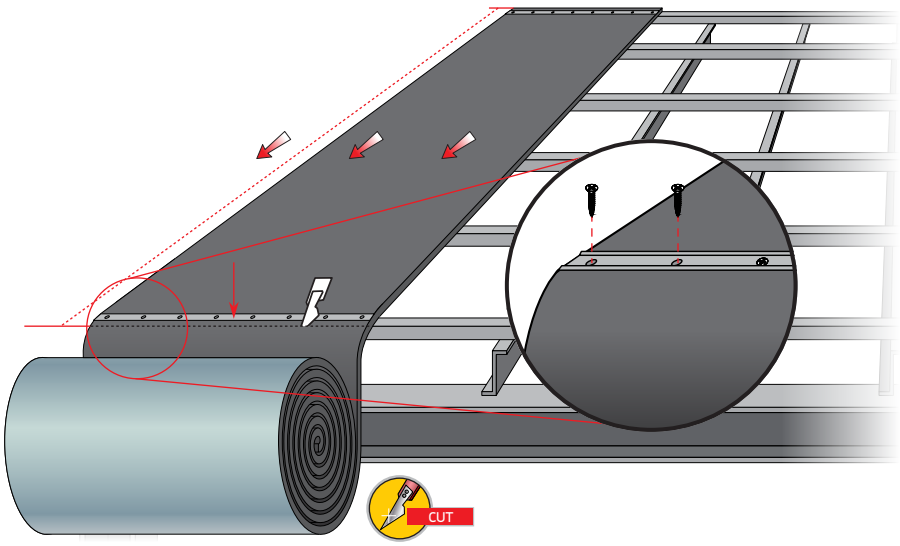

3 Pull the foam to tighten and align before screwing on the other end. Cut off excess foam after securing, if any

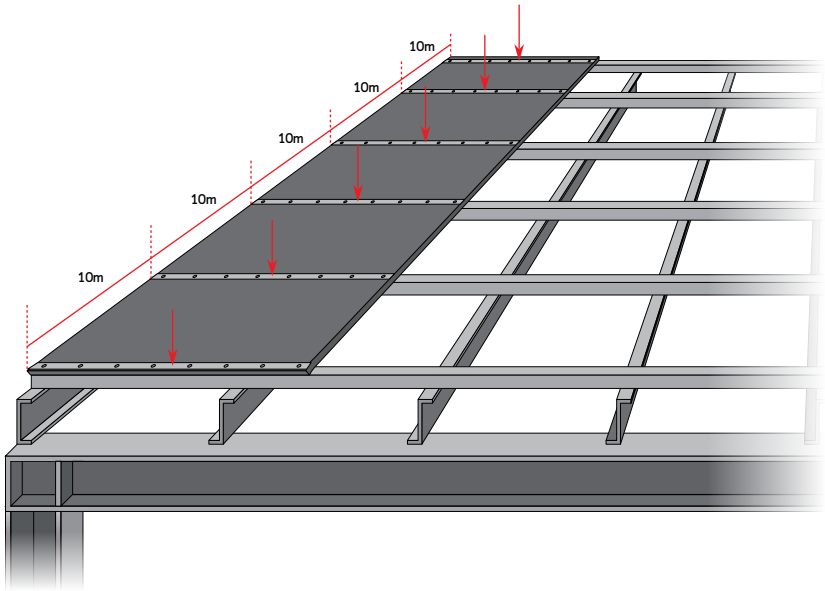

4 Secure the middle section of the foam at every 10 meters interval

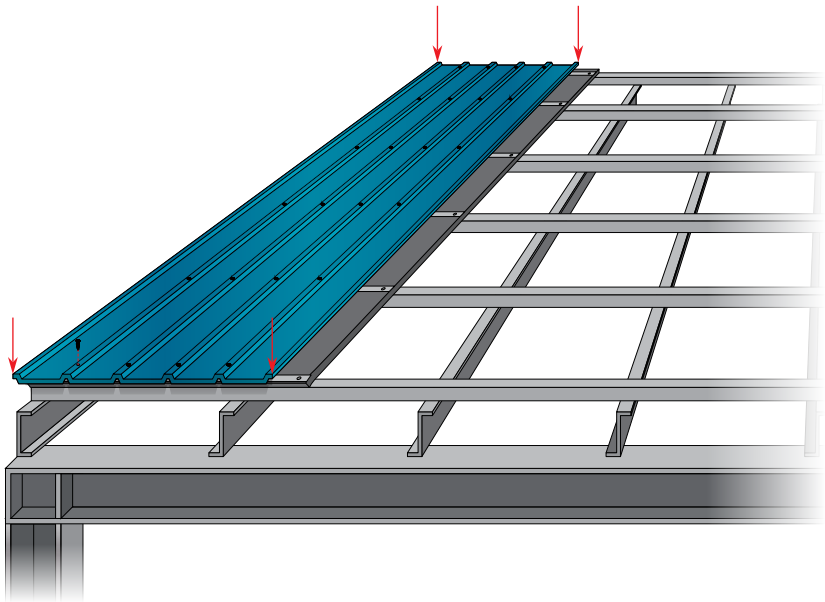

5 Install the metal deck roof above the insulation foam

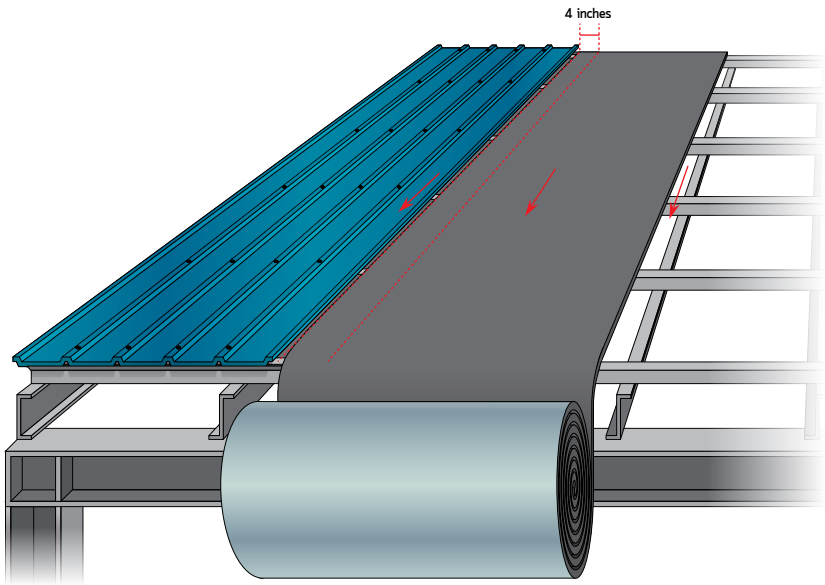

6 Unroll another roll of **Trocellen HeatPro** and ensure an overlapping of 4 inches on the previous installed section

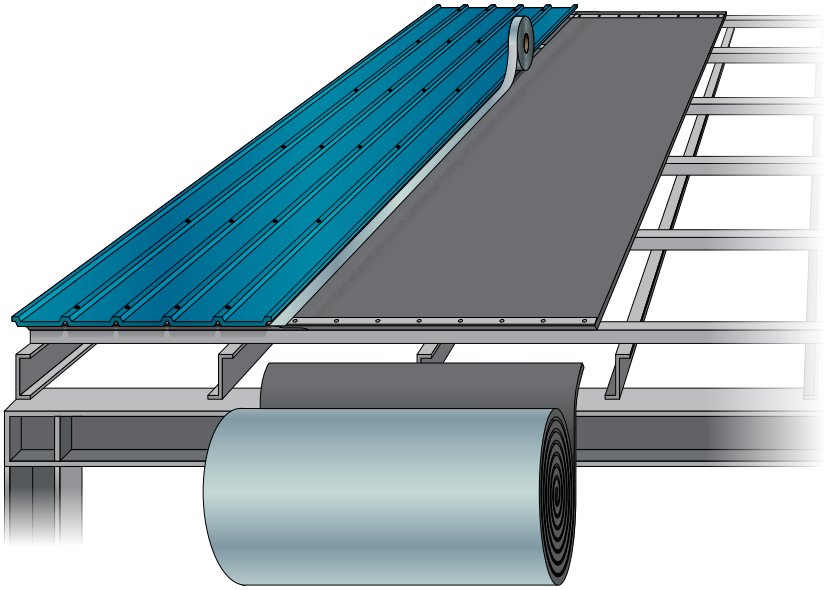

7 Secure one end, pull to tighten and align before screwing on the other end of the foam. Cut off excess foam and apply **Trocellen DuraSeal** tape on the overlapping foam

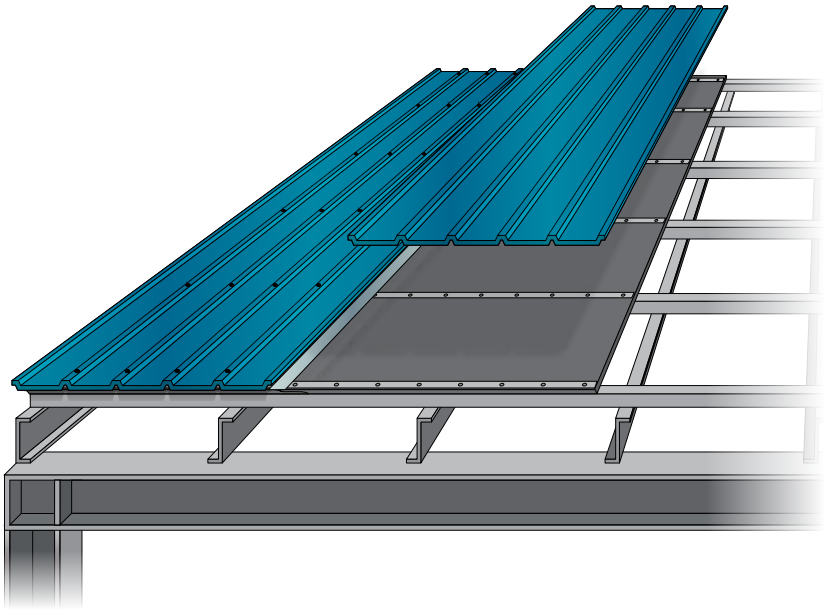
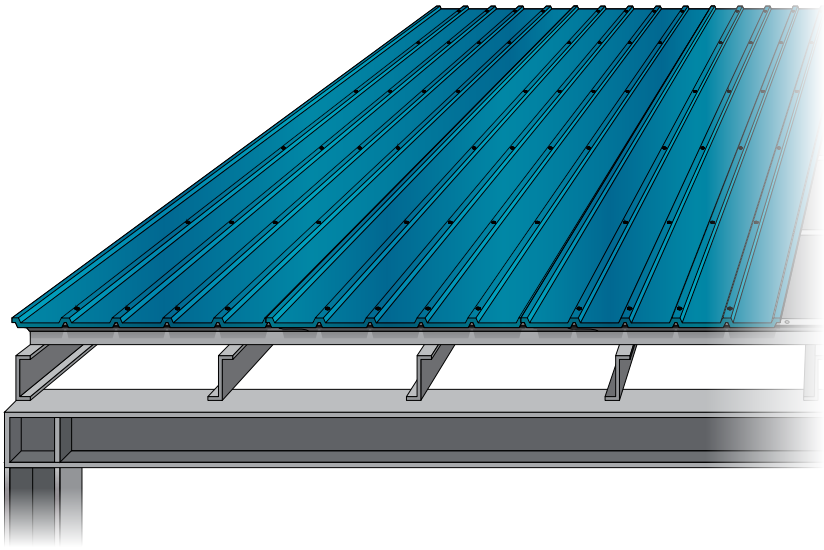
8 Repeat from **STEP 4** for each section until completion